

Triple System - System Installation Manual

The Triple System should be installed according to the MMS recommendations below. MMS can offer installation support if required. Please refer to the operating manual for further information on how to operate the system.

Please refer to the PID in the folder for the recommended dimensions and connections.

Placing the System:

- **Distance:** the system should be positioned to allow access for operation and service. MMS recommend ~50 cm on the left/right side of the system and 20-30 cm in the front and back of the system.
- **Temperature:** The system should be installed indoors at a temperature between 5 and 30 °C and a humidity level below 80 %.
- **Support feet:** The system should be placed at ground level and the support feet should be adjusted to stabilize the system and to compensate surface irregularities.

Caution:

- Ensure that the system is depressurized and all pumps are switched off before connecting the utility lines.
- The system or its instruments may be damaged due to vibrations if the support feet are not adjusted to stabilize the system.
- The system may be damaged if the humidity is higher than the recommended level.


Caution



Electrical Connections:


Please refer to the electrical diagram for information on the electrical requirements.

- **System power supply:** Connect the power plug of the cabinet to the power supply (230VAC/50Hz).
- **Balance(s):** Connect the 4-20 mA signal connection cable(s) and the power supply cable(s) from the system to the balance(s).

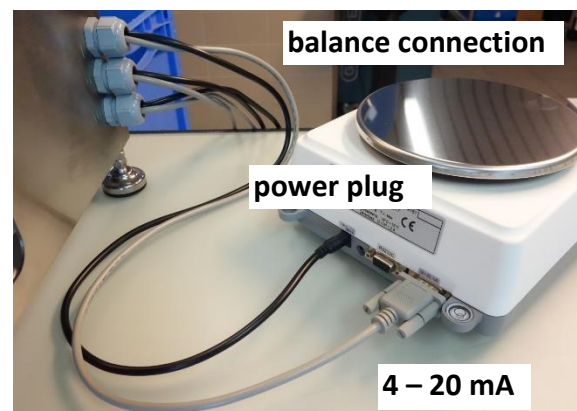

Utility and additional System Connections:

Please connect all utilities as mentioned below:

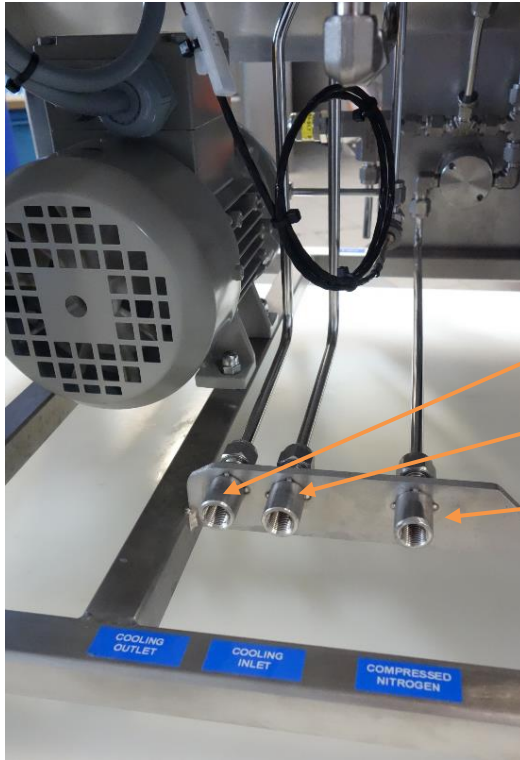

Cooling/heating outlet (G 1/8")

Cooling/heating inlet (G 1/8")

Compressed nitrogen (G 1/8")